

Speciality “STAKED-IN” Universal Joints...

For over forty years automakers have decreased assembly time and cut production cost by crimping universal joints into the driveline assemblies. According to the manufacturer the joints are “STAKED-IN” and non-replaceable.

430-9

Datsun 1200	1971-73
Datsun B210.....	1974-82
Subaru Justy.....	1989-94

430-9A

Honda CRV	2002-06
-----------------	---------

430-9B

Honda CRV	1997-01
-----------------	---------

430-10

Jaguar XJ6-3 Bolt Flng	1988-89
Lexus RX300	1999-03
Lexus RX330	2004-06
Lexus RX350	2007-09
Nissan 200SX.....	1978-84
Nissan 240SX.....	1989-93
Nissan 280ZX.....	1976-84
Nissan 810.....	1977-80
Nissan Maxima	1977-80
Nissan Pickup D21	1986-89
Subaru 3 Door Coupe.....	1986-89
Subaru Baja.....	2003

430-10 cont.

Subaru Forester.....	1998-05
Subaru Hatchback	1985-89
Subaru Legacy	1990-99
Subaru Legacy Outback	1995-03
Subaru Loyale	1990-93
Subaru Sedan.....	1985-89
Subaru SVX.....	1992-96
Subaru Wagon.....	1985-89
Subaru XT/XT6.....	1985-90
Toyota Camry All-Trac	1988-91
Toyota Celica	1981-85
Toyota Corolla.....	1981-85
Toyota Corolla All-Trac.....	1988-92
Toyota Cressida.....	1985-88
Toyota Highlander (exc. Hybrid)	2001-07
Toyota Previa.....	1991-96
Toyota Sienna AWD.....	2004-10
Toyota Rav 4.....	1996-01


430-10A

Mazda Miata	1990-05
Mazda RX-7 (Exc. 87-91 Turbo)....	1984-91
Subaru Forester.....	2006-08

Measure Twice!!!

Take the time to double check the application before you press or cut out your original equipment u-joints... As hard as we try to provide you with the most accurate fitment information you should always know before you cut that the part you are replacing is going to solve the problem...

RDL Part No.	A	B
	Bearing Dia.	Inside Lockup
430-9	.791	1.285
430-9A	.791	1.315
430-9B	.791	1.335
430-10	.867	1.400
430-10A	.867	1.515
430-10B	.867	1.725
430-10C	.867	1.670
430-11	.947	1.900
430-11A	.947	1.641
430-12	.972	1.641
430-12A	1.098	1.995

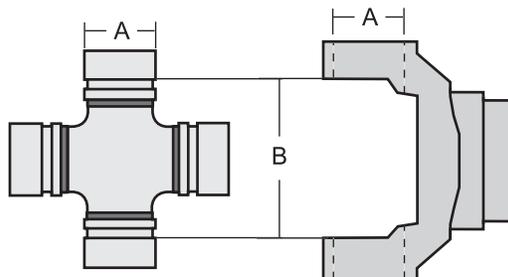

Speciality “STAKED-IN” Universal Joints...

For over forty years automakers have decreased assembly time and cut production cost by crimping universal joints into the driveline assemblies. According to the manufacturer the joints are “STAKED-IN” and non-replaceable.

430-10B

Mercur Scorpio1988-89

430-10C

Honda Civic Wagon 4WD1988-91

430-11

BMW 735i1987-92
 BMW 750i1988-94
 BMW M51991-94
 Diahatsu Rocky (Rear)1990-92
 Mazda 9291988-95
 Mazda B20001979-84
 Mazda B20001986-89
 Mazda B22001979-84
 Mazda B22001987-93
 Mazda B26001987-93
 Mazda MPV (2WD)1989-93
 Mazda RX7 Turbo1987-91

430-11A

BMW 535i1989-93
 Honda Ridgeline2006-08
 Nissan 300ZX (Exc. Twin Turbo) ...1984-89

430-12

Nissan 300ZX (Exc. Twin Turbo) ...1990-96
 Nissan 300ZX (Twin Turbo)1987-89
 Nissan Pathfinder 4x4 (Rear)1991-95
 Nissan Pickup 4x4 (Rear)1991-93
 Nissan Pickup 2WD 4 cyl.1990-94
 Toyota Cressida1989-92

430-12A

BMW 740I1993-94
 BMW 740IL1993-94
 Infinity Q451990-96
 Nissan 300ZX (Twin Turbo)1990-96

Measure Twice!!!

Take the time to double check the application before you press or cut out your original equipment u-joints... As hard as we try to provide you with the most accurate fitment information you should always know before you cut that the part you are replacing is going to solve the problem...

RDL Part No.	A Bearing Dia.	B Inside Lockup
430-9	.791	1.285
430-9A	.791	1.315
430-9B	.791	1.335
430-10	.867	1.400
430-10A	.867	1.515
430-10B	.867	1.725
430-10C	.867	1.670
430-11	.947	1.900
430-11A	.947	1.641
430-12	.972	1.641
430-12A	1.098	1.995

